

zūmo 660 Installation Instructions

Mount Your zūmo on the Motorcycle




WARNING: Incorrectly wiring the power cable with bare wire leads can result in damage to the vehicle or the battery and can cause bodily injury. Garmin strongly recommends having an experienced installer with the proper knowledge of electrical systems install the unit.



See the *Important Safety and Product Information* guide in the product box for product warnings and other important information.

Step 1: Connect Power to the Mount

Select a suitable and secure location to mount the zūmo on your motorcycle, based on available power sources and safe cable routing.

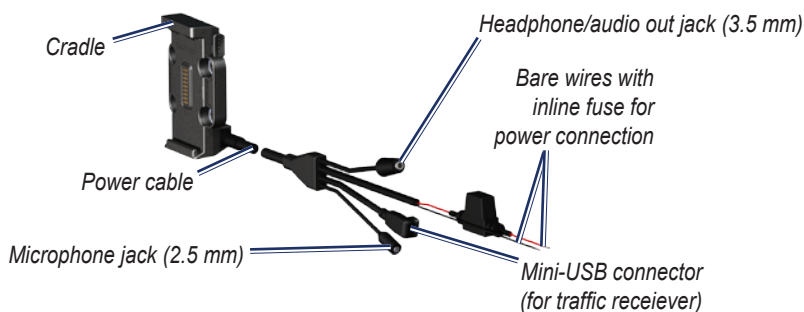

Step 2: Install the Handlebar Base

The zūmo includes parts for two handlebar installation solutions. Custom mounts can require additional hardware (www.ram-mount.com).

A) To install the U-bolt and handlebar base:

1. Place the U-bolt around the handlebar, and thread the ends through the handlebar base.
2. Tighten the nuts to secure the base. Do not overtighten.



NOTE: The recommended torque is 50 lbf-in. Do not exceed torque of 80 lbf-in.

